

System and Settings

There are a number of miscellaneous settings and firmware settings that can be configured.

Viewing and Updating the Firmware

- View Version
1. Press the UTIL key.

UTIL
2. Press F2 (Cal.).

Cal. F2
3. Press F2 (Software).

Software F2
4. Press F1 (Version) to view the firmware version.

Version F1

The version information will be shown on screen:
Instrument, Version, FPGA Revision

- Update Firmware
5. To update the firmware, insert a USB flash drive with a firmware file in the USB host drive. Press F2 (Upgrade).

Upgrade F2

Note

The firmware file (*.bin) must be located in a directory, directly off the USB root directory.