

# Multi-Range DC Power Supply

PHU Series

---

## PROGRAMMING MANUAL



ISO-9001 CERTIFIED MANUFACTURER

**GW INSTEK**

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

# Table of Contents

**S**AFETY INSTRUCTIONS ..... 4

**R**EMOTE CONTROL ..... 7

    Command Syntax ..... 8

    Command List ..... 11

    Status Register Overview ..... 58

    Error List ..... 73

**A**PPENDIX ..... 81

    PHU Default Settings ..... 81

# S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow during operation and storage. Read the following before any operation to insure your safety and to keep the instrument in the best possible condition.

## Safety Symbols

These safety symbols may appear in this manual or on the instrument.

---



WARNING

Warning: Identifies conditions or practices that could result in injury or loss of life.



CAUTION

Caution: Identifies conditions or practices that could result in damage to the PHU or to other properties.



DANGER High Voltage



Attention Refer to the Manual



Protective Conductor Terminal



Earth (ground) Terminal



Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

## Safety Guidelines

---

### General Guideline



#### CAUTION

- Do not place any heavy object on the PHU.
- Avoid severe impact or rough handling that leads to damaging the PHU.
- Do not discharge static electricity to the PHU.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block the cooling fan opening.
- Do not disassemble the PHU unless you are qualified.

### Power Supply



#### WARNING

- AC Input voltage rating: 100Vac-240Vac +/-10%
- Frequency: 47Hz~63Hz
- To avoid electrical shock connect the protective grounding conductor of the AC power cord to an earth ground.

### Cleaning the PHU

- Disconnect the power cord before cleaning.
- Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.
- Do not use chemicals containing harsh material such as benzene, toluene, xylene, and acetone.

### Operation Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Relative Humidity: 20%~ 85%
- Altitude: < 2000m
- Temperature: 0°C to 50°C

- Mains supply voltage fluctuations:  $\pm 10\%$
- Overvoltage category: OVC II
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.
- LAN, RS232/RS485, USB, and GPIB ports are only to be connected to the circuits which are separated from mains supply by double / reinforce insulation.

(Pollution Degree) EN61010-1 and EN61010-2-030 specify the pollution degrees and their requirements as follows. The PHU falls under degree 2.

Pollution refers to “addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity”.

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

---

**Storage environment**

- Location: Indoor
  - Temperature:  $-25^{\circ}\text{C}$  to  $70^{\circ}\text{C}$
  - Relative Humidity:  $<90\%$
- 

**Disposal**



Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.

# **R**EMOTE CONTROL

This chapter describes basic configuration of IEEE488.2 based remote control. For a command list, refer to the programming manual, downloadable from GW Instek website, [www.gwinstek.com](http://www.gwinstek.com)

---

<b>Command Syntax .....</b>	<b>8</b>
<b>Command List .....</b>	<b>11</b>
<b>Status Register Overview .....</b>	<b>58</b>
Introduction to the Status Registers.....	58
The Status Registers.....	59
Questionable Status Register Group.....	60
Operation Status Register Group .....	63
Standard Event Status Register Group.....	68
Status Byte Register & Service Request Enable Register .....	70
<b>Error List .....</b>	<b>73</b>
Command Errors .....	73
Execution Errors .....	77
Device Specific Errors.....	79
Query Errors .....	80


# Command Syntax

Compatible Standard	IEEE488.2 SCPI, 1999	Partial compatibility Partial compatibility
---------------------	-------------------------	------------------------------------------------

**Command Structure**

SCPI commands follow a tree-like structure, organized into nodes. Each level of the command tree is a node. Each keyword in a SCPI command represents each node in the command tree. Each keyword (node) of a SCPI command is separated by a colon (:).

For example, the diagram below shows an SCPI sub-structure and a command example.

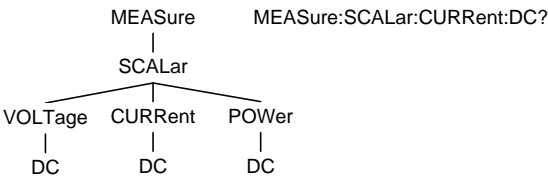

**Command types**

There are a number of different instrument commands and queries. A command sends instructions or data to the unit and a query receives data or status information from the unit.

Command types


Simple	A single command with/without a parameter
Example	*IDN?
Query	A query is a simple or compound command followed by a question mark (?). A parameter (data) is returned.
Example	meas:curr:dc?



Compound	<p>Two or more commands on the same command line. Compound commands are separated with either a semi-colon (;) or a semi-colon and a colon (;:).</p> <p>A semi-colon is used to join two related commands, with the caveat that the last command must begin at the last node of the first command.</p> <p>A semi-colon and colon are used to combine two commands from different nodes.</p>
Example	meas:volt:dc?;;meas:curr:dc?
Command Forms	<p>Commands and queries have two different forms, long and short. The command syntax is written with the short form of the command in capitals and the remainder (long form) in lower case.</p> <p>The commands can be written in capitals or lower-case, just so long as the short or long forms are complete. An incomplete command will not be recognized.</p> <p>Below are examples of correctly written commands.</p>
Long form	<p>STATus:OPERation:NTRansition?</p> <p>STATUS:OPERATION:NTRANSITION?</p> <p>status:operation:ntransition?</p>
Short form	<p>STAT:OPER:NTR?</p> <p>stat:oper:ntr?</p>

**Square Brackets**    Commands that contain square brackets indicate that the contents are optional. The function of the command is the same with or without the square bracketed items, as shown below.

Both “DISPlay:MENU[:NAME]?” and “DISPlay:MENU?” are both valid forms.

Command Format		<ol style="list-style-type: none"><li>1. Command header</li><li>2. Space</li><li>3. Parameter 1</li><li>4. Comma (no space before/after comma)</li><li>5. Parameter 2</li></ol>
----------------	-----------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Parameters	Type	Description	Example
	<Boolean>	Boolean logic	0, 1
	<NR1>	integers	0, 1, 2, 3
	<NR2>	decimal numbers	0.1, 3.14, 8.5
	<NR3>	floating point	4.5e-1, 8.25e+1
	<NRf>	any of NR1, 2, 3	1, 1.5, 4.5e-1
	<block data>	Definitive length arbitrary block data. A single decimal digit followed by data. The decimal digit specifies how many 8-bit data bytes follow.	
Message Terminator	LF	Line feed code	

## Command List

---

Abort Command	ABORt .....	14
Apply Command	APPLy .....	15
Initiate Command	INITiate[:IMMediate]:NAME .....	16
Measure Commands	MEASure[:SCALar]:ALL[:DC] .....	17
	MEASure[:SCALar]:CURRent[:DC] .....	17
	MEASure[:SCALar]:VOLTage[:DC] .....	17
	MEASure[:SCALar]:POWer[:DC] .....	18
Output Commands	OUTPut:DELay:ON .....	19
	OUTPut:DELay:OFF .....	19
	OUTPut:MODE .....	20
	OUTPut[:STATe][:IMMediate] .....	20
	OUTPut[:STATe]:TRIGgered .....	21
	OUTPut:PROTection:CLEar .....	21
	OUTPut:PROTection:TRIPped .....	21
Sense Command	SENSe:AVERage:COUNT .....	22
Status Commands	STATus:OPERation[:EVENT] .....	23
	STATus:OPERation:CONDition .....	23
	STATus:OPERation:ENABLE .....	23
	STATus:OPERation:PTRansition .....	24
	STATus:OPERation:NTRansition .....	24
	STATus:QUEStionable[:EVENT] .....	24
	STATus:QUEStionable:CONDition .....	25
	STATus:QUEStionable:ENABLE .....	25
	STATus:QUEStionable:PTRansition .....	25
	STATus:QUEStionable:NTRansition .....	25
	STATus:PRESet .....	26
Source Commands	[SOURce:]CURRent[:LEVel][:IMMediate] [:AMPLitude] .....	27
	[SOURce:]CURRent[:LEVel]:TRIGgered[:AMPLitude] .....	28
	[SOURce:]CURRent:PROTection[:LEVel] .....	28

	[SOURce:]CURRent:PROTection:STATe .....	29
	[SOURce:]CURRent:SLEW:RISing .....	29
	[SOURce:]CURRent:SLEW:FALLing.....	30
	[SOURce:]RESistance[:LEVel][:IMMediate]	
	[:AMPLitude] .....	31
	[SOURce:]VOLTag[:LEVel][:IMMediate]	
	[:AMPLitude] .....	33
	[SOURce:]VOLTag[:LEVel]:TRIGgered[:AMPLitude]	33
	[SOURce:]VOLTag:PROTection[:LEVel] .....	34
	[SOURce:]VOLTag:SLEW:RISing .....	34
	[SOURce:]VOLTag:SLEW:FALLing.....	36
<b>Trigger Commands</b>	TRIGger:TRANsient[:IMMediate] .....	37
	TRIGger:TRANsient:SOURce .....	37
	TRIGger:OUTPut[:IMMediate] .....	38
	TRIGger:OUTPut:SOURce.....	38
	Trigger Command Examples .....	38
<b>System Commands</b>	SYSTem:BEEPer[:IMMediate] .....	41
	SYSTem:CONFigure:BEEPer[:STATe] .....	41
	SYSTem:CONFigure:BLEeder[:STATe] .....	42
	SYSTem:CONFigure:CURRent:CONTRol .....	42
	SYSTem:CONFigure:VOLTag:CONTRol.....	43
	SYSTem:CONFigure:MSLave .....	43
	SYSTem:CONFigure:OUTPut:EXTernal[:MODE] .....	44
	SYSTem:CONFigure:OUTPut:PON[:STATe] .....	44
	SYSTem:COMMunicate:ENABle.....	45
	SYSTem:COMMunicate:GPIB[:SELF]:ADDReSS .....	46
	SYSTem:COMMunicate:LAN:IPADdress .....	46
	SYSTem:COMMunicate:LAN:GATEway .....	47
	SYSTem:COMMunicate:LAN:SMASk .....	47
	SYSTem:COMMunicate:LAN:MAC .....	47
	SYSTem:COMMunicate:LAN:DHCP .....	48
	SYSTem:COMMunicate:LAN:DNS.....	48
	SYSTem:COMMunicate:LAN:HOSTname .....	48
	SYSTem:COMMunicate:LAN:WEB:PACTive .....	49
	SYSTem:COMMunicate:LAN:WEB:PASSword .....	49
	SYSTem:COMMunicate:RLState .....	50
	SYSTem:COMMunicate:USB:FRONT:STATe.....	50
	SYSTem:COMMunicate:USB:REAR:STATe .....	51
	SYSTem:COMMunicate:USB:REAR:MODE.....	51
	SYSTem:ERRor.....	51
	SYSTem:KEYLock:MODE.....	52
	SYSTem:KLOCK.....	52

---

	SYSTem:INFormation.....	52
	SYSTem:PRESet.....	53
	SYSTem:VERSion.....	53
Common	*CLS.....	54
Commands	*ESE.....	54
	*ESR.....	55
	*IDN.....	55
	*OPC.....	55
	*RST.....	56
	*SRE.....	56
	*STB.....	56
	*TRG.....	57
	*TST.....	57
	*WAI.....	57

Abort Command

---

ABORt .....14

ABORt Set →

---

Description	The ABORt command will cancel any triggered actions.
Syntax	ABORt

APPLy Command

APPLy ..... 15



Description	<p>The APPLy command is used to set both the voltage and current. The voltage and current will be output as soon as the function is executed if the programmed values are within the accepted range. An execution error will occur if the programmed values are not within accepted ranges.</p> <p>The Apply command will set the voltage/current values but these values will not be reflected on the display until the Output is On or if the DISPLay:MENU:NAME 3 (set menu) command is used.</p>	
Syntax	APPLy {<voltage> MIN MAX}{, {<current> MIN MAX}}	
Query Syntax	APPLy?	
Parameter	<voltage>	<NRf> 0% to 105% of the rated output voltage.
	<current>	<NRf> 0% to 105% of the rated output current.
	MIN	0 volts/0 amps
	MAX	Maxium value for the present range.
Return parameter	<NRf>	Returns the voltage and current.
Example	APPL 5.05,1.1	
	Sets the voltage and current to 5.05 V and 1.1 A.	
Query Example	APPL?	
	+5.050, +1.100	
	Returns voltage (5.05 V) and current (1.1 A) setting.	

Initiate Command

INITiate[:IMMediate]:NAME .....	16
---------------------------------	----

INITiate[:IMMediate]:NAME	<div>Set →</div>
---------------------------	------------------

Description	The INITiate command starts the TRANSient or OUTPut trigger.  See the trigger commands on page 37 for usage details.	
Syntax	INITiate[:IMMediate]:NAME {TRANSient OUTPut}	
Parameter	TRANSient	Starts the TRANSient trigger.
	OUTPut	Starts the OUTPut trigger.
Example	INITiate:NAME TRANient Starts the TRANSient trigger.	



## Measure Commands

MEASure[:SCALar]:ALL[:DC].....	17
MEASure[:SCALar]:CURRent[:DC] .....	17
MEASure[:SCALar]:VOLTage[:DC] .....	17
MEASure[:SCALar]:POWer[:DC] .....	18

### MEASure[:SCALar]:ALL[:DC]

→ Query

Description	Takes a measurement and returns the average output current and voltage	
Syntax	:MEASure[:SCALar]:ALL[:DC]?	
Return parameter	" +0.0000,+0.0000"	<voltage>,<current> Returns the voltage (V) and current (A), respectively.

### MEASure[:SCALar]:CURRent[:DC]

→ Query

Description	Takes a measurement and returns the average output current	
Syntax	MEASure[:SCALar]:CURRent[:DC]?	
Return parameter	<NRf>	Returns the current in amps.

### MEASure[:SCALar]:VOLTage[:DC]

→ Query

Description	Takes a measurement and returns the average output voltage.	
Syntax	MEASure[:SCALar]:VOLTage[:DC]?	
Return	<NRf>	Returns the voltage in volts.

MEASure[:SCALar]:POWer[:DC]


→ Query

Description	Takes a measurement and returns the average output power.
Syntax	MEASure[:SCALar]:POWer[:DC]?
Return	<NRf> Returns the power measured in watts.

## Output Commands


OUTPut:DElay:ON.....	19
OUTPut:DElay:OFF.....	19
OUTPut:MODE.....	20
OUTPut[:STATe][:IMMediate].....	20
OUTPut[:STATe]:TRIGgered.....	21
OUTPut:PROTection:CLEar.....	21
OUTPut:PROTection:TRIPped.....	21

### OUTPut:DElay:ON




Description	Sets the Delay Time in seconds for turning the output on. The delay is set to 0.00 by default.	
Syntax	OUTPut:DElay:ON <NRf>	
Query Syntax	OUTPut:DElay:ON?	
Parameter	<NRf>	0.00~99.99 seconds, where 0=no delay.
Return parameter	<NRf>	Returns the delay on time in seconds until the output is turned on.

### OUTPut:DElay:OFF




Description	Sets the Delay Time in seconds for turning the output off. The delay is set to 0.00 by default.	
Syntax	OUTPut:DElay:OFF <NRf>	
Return Syntax	OUTPut:DElay:OFF?	
Parameter	<NRf>	0.00~99.99 seconds, where 0=no delay.
Return parameter	<NRf>	Returns the delay off time in seconds until the output is turned off.

## OUTPut:MODE




Description	Sets the PHU output mode. This is the equivalent to the Output Mode (V-I Mode Slew Rate Select) settings.	
Syntax	OUTPut:MODE {<NR1> CVHS CCHS CVLS CCLS}	
Return Syntax	OUTPut:MODE?	
Parameter	0	CV high speed priority
	CVHS	CV high speed priority
	1	CC high speed priority
	CCHS	CC high speed priority
	2	CV slew rate priority
	CVLS	CV slew rate priority
	3	CC slew rate priority
	CCLS	CC slew rate priority
Return parameter	<NR1>	Returns the output mode.

## OUTPut[:STATe][:IMMediate]



Description	Turns the output on or off.	
Syntax	OUTPut[:STATe][:IMMediate] { OFF   ON   0   1 }	
Query Syntax	OUTPut[:STATe][:IMMediate]?	
Parameter	0	<NR1> Turns the output off.
	OFF	Turns the output off.
	1	<NR1> Turns the output on.
	ON	Turns the output on.
Return parameter	<NR1>	Returns output status of the instrument.

## OUTPut[:STATe]:TRIGgered



Description	Turns the output on or off when a software trigger is generated.	
Syntax	OUTPut[:STATe]:TRIGgered { OFF   ON   0   1 }	
Query Syntax	OUTPut[:STATe]:TRIGgered?	
Parameter	0	<NR1>Turns the output off when a software trigger is generated.
	OFF	Turns the output off when a software trigger is generated.
	1	<NR1>Turns the output on when a software trigger is generated.
	ON	Turns the output on when a software trigger is generated.
Return parameter	<NR1>	Returns output trigger status of the instrument.

## OUTPut:PROTection:CLEAr



Description	Clears over-voltage, over-current and over-temperature (OVP, OCP, OTP) protection circuits. It also clears the shutdown protection circuit. The AC failure protection cannot be cleared.
Syntax	OUTPut:PROTection:CLEAr

## OUTPut:PROTection:TRIPped



Description	Returns the state of the protection circuits (OVP, OCP, OTP).	
Query Syntax	OUTPut:PROTection:TRIPped?	
Return parameter	0	<NR1>Protection circuits are not tripped.
	1	<NR1>Protection circuits are tripped.

Sense Command

SENSe:AVERage:COUNT .....22

SENSe:AVERage:COUNT

Set →  
→ Query

Description	Determines the level of smoothing for the average setting. This is the equivalent to the F-17 function setting.	
Syntax	SENSe:AVERage:COUNT {<NR1>   LOW   MIDDLE   HIGH}	
Query Syntax	SENSe:AVERage:COUNT?	
Parameter	0   LOW	Low level of smoothing.
	1   MIDDLE	Middle level of smoothing.
	2   HIGH	High level of smoothing.
Return parameter	<NR1>	Returns the level of smoothing.
	0	Low level of smoothing.
	1	Middle level of smoothing.
	2	High level of smoothing.
Example	SENSe:AVERage:COUNT 1	
	Sets the level of smoothing to middle.	

## Status Commands

STATus:OPERation[:EVENT]	23
STATus:OPERation:CONDition	23
STATus:OPERation:ENABle	23
STATus:OPERation:PTRansition	24
STATus:OPERation:NTRansition	24
STATus:QUEStionable[:EVENT]	24
STATus:QUEStionable:CONDition	25
STATus:QUEStionable:ENABle	25
STATus:QUEStionable:PTRansition	25
STATus:QUEStionable:NTRansition	25
STATus:PRESet	26

### STATus:OPERation[:EVENT]

Description	Queries the Operation Status Event register and clears the contents of the register.
Syntax	STATus:OPERation[:EVENT]?
Return	<NR1> Returns the bit sum of the Operation Status Event register.

### STATus:OPERation:CONDition

Description	Queries the Operation Status register. This query will not clear the register.
Syntax	STATus:OPERation:CONDition?
Return	<NR1> Returns the bit sum of the Operation Condition register.

### STATus:OPERation:ENABle

Description	Sets or queries the bit sum of the Operation Status Enable register.
-------------	----------------------------------------------------------------------

Syntax                    STATus:OPERation:ENABle <NRf>

Query Syntax            STATus:OPERation:ENABle?

Parameter              <NRf>    0 ~ 32767

Return parameter      <NR1>    0 ~ 32767

Set →

→ Query

## STATus:OPERation:PTRansition

Description            Sets or queries the bit sum of the positive transition filter of the Operation Status register.

Syntax                    STATus:OPERation:PTRansition <NRf>

STATus:OPERation:PTRansition?

Parameter              <NRf>    0 ~ 32767

Return parameter      <NR1>    0 ~ 32767

Set →

→ Query

## STATus:OPERation:NTRansition

Description            Sets or queries the bit sum of the negative transition filter of the Operation Status register.

Syntax                    STATus:OPERation:NTRansition <NRf>

Query Syntax            STATus:OPERation:NTRansition?

Parameter              <NRf>    0 ~ 32767

Return parameter      <NR1>    0 ~ 32767

## STATus:QUEStionable[:EVENT]

→ Query

Description            Queries the bit sum of the Questionable Status Event register. This query will also clear the contents of the register.

Query Syntax            STATus:QUEStionable[:EVENT]?

Parameter              <NRf>    0 ~ 32767

Return parameter      <NR1>    0 ~ 32767



## STATus:QUEStionable:CONDition

→ Query

Description Queries the status (bit sum) of the Questionable Status register. This query will not clear the register.

Query Syntax STATus:QUEStionable:CONDition?

Parameter <NRf> 0 ~ 32767

Return parameter <NR1> 0 ~ 32767

Set →

## STATus:QUEStionable:ENABLE

→ Query

Description Sets or queries the bit sum of the Questionable Status Enable register.

Syntax STATus:QUEStionable:ENABLE <NRf>

Query Syntax STATus:QUEStionable:ENABLE?

Parameter <NRf> 0 ~ 32767

Return parameter <NR1> 0 ~ 32767

Set →

## STATus:QUEStionable:PTRansition

→ Query

Description Sets or queries the bit sum of the positive transition filter of the Questionable Status register.

Syntax STATus:QUEStionable:PTRansition <NRf>

Return Syntax STATus:QUEStionable:PTRansition?

Parameter <NRf> 0 ~ 32767

Return parameter <NR1> 0 ~ 32767

Set →

## STATus:QUEStionable:NTRansition

→ Query

Description Sets or queries the negative transition filter of the Questionable Status register.

Syntax	STATus:QUEStionable:NTRansition <NRf>	
Query Syntax	STATus:QUEStionable:NTRansition?	
Parameter	<NRf>	0 ~ 32767
Return parameter	<NR1>	0 ~ 32767

**STATus:PRESet**



**Description** This command resets the ENABLE register, the PTRansition filter and NTRansition filter on the Operation Status and Questionable Status Registers. The registers/filters will be reset to a default value.

Default Register/Filter Values	Setting
QUEStionable Status Enable	0x0000
QUEStionable Status Positive Transition	0x7FFF
QUEStionable Status Negative Transition	0x0000
Operation Status Enable	0x0000
Operation Status Positive Transition	0x7FFF
Operation Status Negative Transition	0x0000

Summary: The Questionable Status Enable registers and the Operation Status Enable registers are both reset to 0.

The Questionable Status and Operation Status Positive Transition filters are all set high (0x7FFF) and the Negative Transition filters are all set low (0x0000). I.e., only positive transitions will be recognized for the Questionable Status and Operation Status registers.

**Syntax** STATus:PRESet

## Source Commands

[SOURce:]CURRent[:LEVel][:IMMediate]	
[:AMPLitude]	27
[SOURce:]CURRent[:LEVel]:TRIGgered[:AMPLitude]	28
[SOURce:]CURRent:PROTection[:LEVel]	28
[SOURce:]CURRent:PROTection:STATe	29
[SOURce:]CURRent:SLEW:RISing	29
[SOURce:]CURRent:SLEW:FALLing	30
[SOURce:]RESistance[:LEVel][:IMMediate]	
[:AMPLitude]	31
[SOURce:]VOLTAge[:LEVel][:IMMediate]	
[:AMPLitude]	33
[SOURce:]VOLTAge[:LEVel]:TRIGgered[:AMPLitude]	33
[SOURce:]VOLTAge:PROTection[:LEVel]	34
[SOURce:]VOLTAge:SLEW:RISing	34
[SOURce:]VOLTAge:SLEW:FALLing	36

[SOURce:]CURRent[:LEVel][:IMMediate]

Set →

[:AMPLitude]

→ Query

Description	Sets or queries the current level in amps. For externally set current levels (from the analog control connector) the set current level is returned.	
Syntax	[SOURce:]CURRent[:LEVel][:IMMediate][:AMPLitude] {<NRF> MIN MAX}	
Query Syntax	[SOURce:]CURRent[:LEVel][:IMMediate][:AMPLitude]? [MIN MAX]	
Parameter/Return	<NRF>	0~105% of the rated current output level.
	MIN	Minimum current level.
	MAX	Maximum current level.
Example	SOUR:CURR:LEV:IMM:AMPL? MAX 37.800 Returns the maximum possible current level in amps.	

[SOURce:]CURRent[:LEVel]:TRIGgered  
[:AMPLitude]

Set →  
→ Query


Description	Sets or queries the current level in amps when a software trigger has been generated.	
Syntax	[SOURce:]CURRent[:LEVel]:TRIGgered[:AMPLitude] {<NRf> MIN MAX}	
Query Syntax	[SOURce:]CURRent[:LEVel]:TRIGgered[:AMPLitude]? [MIN MAX]	
Parameter/Return	<NRf>	0%~105% of the rated current output in amps.
	MIN	Minimum current level.
	MAX	Maximum current level.
Example	SOUR:CURR:LEV:TRIG:AMPL? MAX 37.800 Returns the maximum possible current level in amps.	

Set →  
→ Query

[SOURce:]CURRent:PROTection[:LEVel]


Description	Sets or queries the OCP (over-current protection) level in amps.	
Syntax	[SOURce:]CURRent:PROTection[:LEVel] {<NRf> MIN MAX}	
Query Syntax	[SOURce:]CURRent:PROTection[:LEVel]? [MIN MAX]	
Parameter/Return	<NRf>	OCP range in Amps.
	MIN	Minimum current level.
	MAX	Maximum current level.
Example	SOUR:CURR:PROT:LEV? MIN +3.600 Returns the minimum possible current level in amps.	

[SOURce:]CURRent:PROTection:STATe



Description	Turns OCP (over-current protection) on or off.	
Syntax	[SOURce:]CURRent:PROTection:STATe {0 1 OFF ON}	
Query Syntax	[SOURce:]CURRent:PROTection:STATe?	
Parameter/Return	0	<NR1> Turns the buzzer off.
	OFF	Turns the OCP off.
	1	<NR1> Turns the OCP on.
	ON	Turns the OCP on.
Return parameter	<Bool>	Returns the protection status (0 or 1).
Example	SOUR:CURR:PROT:STAT OFF Turns OCP off.	

[SOURce:]CURRent:SLEW:RISing



Description	Sets or queries the rising current slew rate. This is only applicable for CC slew rate priority mode.		
Syntax	[SOURce:]CURRent:SLEW:RISing {<NRf> MIN MAX}		
Query Syntax	[SOURce:]CURRent:SLEW:RISing? [MIN MAX]		
Parameter/Return	<NRf>	PHU 80-170	(0.01 to 340.00) A/S
		PHU 200-70	(0.01 to 140.00) A/S
		PHU 500-30	(0.001 to 60.000) A/S
		PHU 750-20	(0.001 to 40.000) A/S
		PHU 1000-15	(0.001 to 30.000) A/S
		PHU 1500-10	(0.001 to 20.000) A/S
		PHU 80-340	(0.1 to 680.0) A/S
		PHU 200-140	(0.01 to 280.00) A/S
		PHU 500-60	(0.01 to 120.0) A/S
		PHU 750-40	(0.01 to 80.00) A/S

		PHU 1000-30	(0.001 to 60.000) A/S
		PHU 1500-20	(0.001 to 40.000) A/S
		PHU 80-510	(0.1 to 1020.0) A/S
		PHU 200-210	(0.01 to 420.00) A/S
		PHU 500-90	(0.01 to 180.00) A/S
		PHU 750-60	(0.01 to 120.00) A/S
		PHU 1000-45	(0.01 to 90.00) A/S
		PHU 1500-30	(0.001 to 60.000) A/S
	MIN	Minimum rising current slew rate.	
	MAX	Maximum rising current slew rate.	

Example      SOUR:CURR:SLEW:RIS 72  
 Sets the rising current slew rate to 72A/s.


**[SOURce:]CURRent:SLEW:FALLing**

Description      Sets or queries the falling current slew rate. This is only applicable for CC slew rate priority mode.

Syntax      [SOURce:]CURRent:SLEW:FALLing  
 {<NRf>|MIN|MAX}


Query Syntax      [SOURce:]CURRent:SLEW:FALLing? [MIN|MAX]

Parameter/Return	NRf	PHU 80-170	(0.01 to 340.00) A/S
		PHU 200-70	(0.01 to 140.00) A/S
		PHU 500-30	(0.001 to 60.000) A/S
		PHU 750-20	(0.001 to 40.000) A/S
		PHU 1000-15	(0.001 to 30.000) A/S
		PHU 1500-10	(0.001 to 20.000) A/S
		PHU 80-340	(0.1 to 680.0) A/S
		PHU 200-140	(0.01 to 280.00) A/S
		PHU 500-60	(0.01 to 120.0) A/S
		PHU 750-40	(0.01 to 80.00) A/S

		PHU 1000-30	(0.001 to 60.000) A/S
		PHU 1500-20	(0.001 to 40.000) A/S
		PHU 80-510	(0.1 to 1020.0) A/S
		PHU 200-210	(0.01 to 420.00) A/S
		PHU 500-90	(0.01 to 180.00) A/S
		PHU 750-60	(0.01 to 120.00) A/S
		PHU 1000-45	(0.01 to 90.00) A/S
		PHU 1500-30	(0.001 to 60.000) A/S
	MIN	Minimum falling current slew rate	
	MAX	Maximum falling current slew rate	

Example      SOUR:CURR:SLEW:FALL 1  
Sets the falling current slew rate to 1A/s.

[SOURce:]RESistance[:LEVel][:IMMediate]  
[:AMPLitude]



Description	Sets or queries the internal resistance in ohms.	
Syntax	[SOURce:]RESistance[:LEVel][:IMMediate][:AMPLitude] {<NRf> MIN DEF MAX ?}	
Query Syntax	[SOURce:]RESistance[:LEVel][:IMMediate][:AMPLitude]? [MIN MAX]	
Parameter/Return	<NRf>	Resistance in ohms:
		(0.000 to 0.471) $\Omega$ (PHU 80-170)
		(0.000 to 2.857) $\Omega$ (PHU 200-70)
		(0.00 to 16.67) $\Omega$ (PHU 500-30)
		(0.00 to 37.50) $\Omega$ (PHU 750-20)
		(0.0 to 66.7) $\Omega$ (PHU 1000-15)
		(0.0 to 150.0) $\Omega$ (PHU 1500-10)
		(0.000 to 0.235) $\Omega$ (PHU 80-340)
		(0.000 to 1.428) $\Omega$ (PHU 200-140)
		(0.00 to 8.33) $\Omega$ (PHU 500-60)

	(0.00 to 18.75) Ω	(PHU 750-40)
	(0.00 to 33.33) Ω	(PHU 1000-30)
	(0.0 to 75.0) Ω	(PHU 1500-20)
	(0.000 to 0.157) Ω	(PHU 80-510)
	(0.00 to 0.95) Ω	(PHU 200-210)
	(0.00 to 5.56) Ω	(PHU 500-90)
	(0.00 to 12.50) Ω	(PHU 750-60)
	(0.00 to 22.22) Ω	(PHU 1000-45)
	(0.0 to 50.0) Ω	(PHU 1500-30)
MIN	Minimum internal resistance in ohms	
MAX	Maximum internal resistance in ohms	

Example      SOUR:RES:LEV:IMM:AMPL 0.1  
Sets the internal resistance to 100mΩ.



[SOURce:]VOLTage[:LEVel][:IMMediate]  
[:AMPLitude]

Set →  
→ Query

Description	Sets or queries the voltage level in volts.	
Syntax	[SOURce:]VOLTage[:LEVel][:IMMediate][:AMPLitude] {<NRf> MIN MAX}	
Query Syntax	[SOURce:]VOLTage[:LEVel][:IMMediate][:AMPLitude]? [MIN MAX]	
Parameter/Return	<NRf>	0~105% of the rated output voltage in volts.
	MIN	Minimum voltage level
	MAX	Maximum voltage level
Example	SOUR:VOLT:LEV:IMM:AMPL 10 Sets the voltage level to 10 volts.	

[SOURce:]VOLTage[:LEVel]:TRIGgered  
[:AMPLitude]

Set →  
→ Query

Description	Sets or queries the voltage level in volts when a software trigger has been generated.	
Syntax	[SOURce:]VOLTage[:LEVel]:TRIGgered[:AMPLitude] {<NRf> MIN MAX}	
Query Syntax	[SOURce:]VOLTage[:LEVel]:TRIGgered[:AMPLitude]? [MIN MAX]	
Parameter/Return	<NRf>	0%~105% of the rated voltage output in volts.
	MIN	Minimum current level.
	MAX	Maximum current level.
Example	SOUR:VOLT:LEV:TRIG:AMPL 10 Sets the voltage level to 10 volts when a software trigger is generated.	

[SOURce:]VOLTage:PROTection[:LEVel] (Set) →  
→ (Query)

Description	Sets or queries the overvoltage protection level.	
Syntax	[SOURce:]VOLTage:PROTection[:LEVel] {<NRf> MIN MAX}	
Query Syntax	[SOURce:]VOLTage:PROTection[:LEVel]? [MIN MAX]	
Parameter/Return	<NRf>	OVP range in volts.
	MIN	Minimum OVP level
	MAX	Maximum OVP level
Example	SOUR:VOLT:PROT:LEV MAX Sets the OVP level to its maximum.	

[SOURce:]VOLTage:SLEW:RISing (Set) →  
→ (Query)

Description	Sets or queries the rising voltage slew rate. This is only applicable for CV slew rate priority mode.		
Syntax	[SOURce:]VOLTage:SLEW:RISing {<NRf> MIN MAX}		
Query Syntax	[SOURce:]VOLTage:SLEW:RISing? [MIN MAX]		
Parameter/Return	<NRf>	PHU 80-170	(0.01 to 160.00) V/S
		PHU 200-70	(0.01 to 400.00) V/S
		PHU 500-30	(0.1 to 1000.0) V/S
		PHU 750-20	(0.1 to 1500.0) V/S
		PHU 1000-15	(0.1 to 2000.0) V/S
		PHU 1500-10	(0.1 to 3000.0) V/S
		PHU 80-340	(0.01 to 160.00) V/S
		PHU 200-140	(0.01 to 400.00) V/S
		PHU 500-60	(0.1 to 1000.0) V/S
		PHU 750-40	(0.1 to 1500.0) V/S
		PHU 1000-30	(0.1 to 2000.0) V/S
		PHU 1500-20	(0.1 to 3000.0) V/S

	PHU 80-510	(0.01 to 160.00) V/S
	PHU 200-210	(0.01 to 400.00) V/S
	PHU 500-90	(0.1 to 1000.0) V/S
	PHU 750-60	(0.1 to 1500.0) V/S
	PHU 1000-45	(0.1 to 2000.0) V/S
	PHU 1500-30	(0.1 to 3000.0) V/S
MIN	Minimum rising voltage slew rate.	
MAX	Maximum rising voltage slew rate.	

Example      SOUR:VOLT:SLEW:RIS MAX  
Sets the rising voltage slew rate to its maximum.

[SOURce:]VOLTage:SLEW:FALLing 



Description	Sets or queries the falling voltage slew rate. This is only applicable for CV slew rate priority mode.		
Syntax	[SOURce:]VOLTage:SLEW:FALLing {<NRf> MIN MAX}		
Query Syntax	[SOURce:]VOLTage:SLEW:FALLing? [MIN MAX]		
Parameter/Return	<NRf>	PHU 80-170	(0.01 to 160.00) V/S
		PHU 200-70	(0.01 to 400.00) V/S
		PHU 500-30	(0.1 to 1000.0) V/S
		PHU 750-20	(0.1 to 1500.0) V/S
		PHU 1000-15	(0.1 to 2000.0) V/S
		PHU 1500-10	(0.1 to 3000.0) V/S
		PHU 80-340	(0.01 to 160.00) V/S
		PHU 200-140	(0.01 to 400.00) V/S
		PHU 500-60	(0.1 to 1000.0) V/S
		PHU 750-40	(0.1 to 1500.0) V/S
		PHU 1000-30	(0.1 to 2000.0) V/S
		PHU 1500-20	(0.1 to 3000.0) V/S
		PHU 80-510	(0.01 to 160.00) V/S
		PHU 200-210	(0.01 to 400.00) V/S
		PHU 500-90	(0.1 to 1000.0) V/S
		PHU 750-60	(0.1 to 1500.0) V/S
		PHU 1000-45	(0.1 to 2000.0) V/S
		PHU 1500-30	(0.1 to 3000.0) V/S
	MIN	Minimum voltage falling slew rate.	
	MAX	Maximum voltage falling slew rate.	

Example      SOUR:VOLT:SLEW:FALL MIN  
 Sets the falling voltage slew rate to its minimum.

Trigger Commands

The trigger commands generate and configure software triggers.

TRIGger:TRANsient[:IMMediate] .....	37
TRIGger:TRANsient:SOURce .....	37
TRIGger:OUTPut[:IMMediate] .....	38
TRIGger:OUTPut:SOURce .....	38
Trigger Command Examples .....	38

TRIGger:TRANsient[:IMMediate]

Set →

Description	Generates a software trigger for the transient trigger system. On a trigger, sets the voltage & current. Refer to the :CURR:TRIG and VOLT:TRIG commands on page 28 and 33, respectively.
Syntax	TRIGger:TRANsient[:IMMediate]
Related Commands	[SOURce:]CURRent[:LEVel]:TRIGgered[:AMPLitude] [SOURce:]VOLTage[:LEVel]:TRIGgered[:AMPLitude]

Set →

TRIGger:TRANsient:SOURce

→ Query

Description	Sets or queries the trigger source for the transient system.	
Syntax	TRIGger:TRANsient:SOURce {BUS   IMMediate}	
Query Syntax	TRIGger:TRANsient:SOURce?	
Parameter/Return	BUS	Internal software trigger. Waits for the *TRG (or IEEE 488.1 “get” group execute trigger) command to start the trigger.
	IMMediate	Starts the trigger immediately. (default)
Example	TRIG:TRAN:SOUR BUS Sets the trigger source as BUS.	

TRIGger:OUTPut[:IMMediate] Set →

Description	Generates a software trigger for the output trigger system. On a trigger, sets the output state. Refer to the :OUTP:TRIG command on page 21.
Syntax	TRIGger:OUTPut[:IMMediate]
Related commands	OUTPut[:STATe]:TRIGgered

TRIGger:OUTPut:SOURce Set →  
→ Query

Description	Sets or queries the trigger source for the output system.	
Syntax	TRIGger:OUTPut:SOURce [BUS   IMMediate]	
Query Syntax	TRIGger:OUTPut:SOURce?	
Parameter/Return	BUS	Internal software trigger. Waits for the *TRG (or IEEE 488.1 “get” group execute trigger) command to start the trigger.
	IMMediate	Starts the trigger immediately. (default)

Example	TRIG:OUTP:SOUR BUS Sets the trigger source of the output system as BUS.
---------	----------------------------------------------------------------------------

Trigger Command Examples

1. The transient system for the trigger in immediate mode.

Example 1	TRIG:TRAN:SOUR IMM CURR:TRIG MAX VOLT:TRIG 5
-----------	----------------------------------------------------

INIT:NAME TRAN

<==The current changes to the maximum, and the voltage changes to 5V.

---

## 2. The transient system for the trigger in BUS mode.

---

Example 2      TRIG:TRAN:SOUR BUS

CURR:TRIG MAX

VOLT:TRIG 5

INIT:NAME TRAN

TRIG:TRAN (or \*TRG)

<==The current changes to the maximum, and the voltage changes to 5V.

---

## 3. The output system for the trigger in immediate mode.

---

Example 3      TRIG:OUTP:SOUR IMM

OUTP:TRIG 1

INIT:NAME OUTP

<==The output changes to ON.

---

## 4. The output system for the trigger in BUS mode.

---

Example 4      TRIG:OUTP:SOUR BUS

OUTP:TRIG 1

INIT:NAME OUTP


TRIG:OUTP (or \*TRG)

<==The output changes to ON.


## System Function Command

SYSTem:BEEPer[:IMMediate] .....	41
SYSTem:CONFigure:BEEPer[:STATe] .....	41
SYSTem:CONFigure:BLEeder[:STATe] .....	42
SYSTem:CONFigure:CURRent:CONTRol .....	42
SYSTem:CONFigure:VOLTAge:CONTRol .....	43
SYSTem:CONFigure:MSLave .....	43
SYSTem:CONFigure:OUTPut:EXTernal[:MODE] .....	44
SYSTem:CONFigure:OUTPut:PON[:STATe] .....	44
SYSTem:COMMunicate:ENABLE .....	45
SYSTem:COMMunicate:GPIB[:SELF]:ADDReSS .....	46
SYSTem:COMMunicate:LAN:IPADdress .....	46
SYSTem:COMMunicate:LAN:GATEway .....	47
SYSTem:COMMunicate:LAN:SMASk .....	47
SYSTem:COMMunicate:LAN:MAC .....	47
SYSTem:COMMunicate:LAN:DHCP .....	48
SYSTem:COMMunicate:LAN:DNS .....	48
SYSTem:COMMunicate:LAN:HOSTname .....	48
SYSTem:COMMunicate:LAN:WEB:PACTive .....	49
SYSTem:COMMunicate:LAN:WEB:PASSword .....	49
SYSTem:COMMunicate:RLState .....	50
SYSTem:COMMunicate:USB:FRONT:STATe .....	50
SYSTem:COMMunicate:USB:REAR:STATe .....	51
SYSTem:COMMunicate:USB:REAR:MODE .....	51
SYSTem:ERRor .....	51
SYSTem:KEYLock:MODE .....	52
SYSTem:KLOCK .....	52
SYSTem:INFormation .....	52
SYSTem:PRESet .....	53
SYSTem:VERSion .....	53



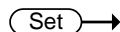


## SYSTem:BEEPer[:IMMediate]

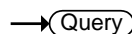

Description	This command causes an audible tone to be generated by the instrument. The duration time is specified in seconds.	
Syntax	SYSTem:BEEPer[:IMMediate] {<NR1> MINimum MAXimum}	
Query Syntax	SYSTem:BEEPer[:IMMediate]? [MINimum MAXimum]	
Parameter	<NR1>	0 ~ 3600 seconds.
	MINimum	Sets the beeper time to the minimum (0 seconds)
	MAXimum	Sets the beeper time to the maximum (3600 seconds)
Return parameter	<NR1>	Returns the remaining beeper duration time in seconds or returns the maximum or minimum beeper time in seconds (for the [MINimum   MAXimum] query parameters).
Example 1	SYST:BEEP 10 **after a 2 second wait** SYST:BEEP? >8 The first command turns the beeper on for 10 seconds. After 2 seconds the SYST:BEEP? query returns the remaining beeper time (8 seconds).	
Example 2	SYST:BEEP? MAX >3600 Returns the maximum settable beeper time in seconds.	




## SYSTem:CONFigure:BEEPer[:STATe]

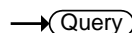

Description	Sets or queries the buzzer state on/off.
-------------	------------------------------------------


Syntax	SYSTem:CONFigure:BEEPer[:STATe] {OFF ON 0 1}	
Query Syntax	SYSTem:CONFigure:BEEPer[:STATe]?	
Parameter	0	<NR1> Turns the buzzer off.
	OFF	Turns the buzzer off.
	1	<NR1> Turns the buzzer on.
	ON	Turns the buzzer on.
Return parameter	<Boolean>	Returns the buzzer status.

## SYSTem:CONFigure:BLEeder[:STATe]



Description	Sets or queries the status of the bleeder resistor.	
Syntax	SYSTem:CONFigure:BLEeder[:STATe]	
Query Syntax	{OFF ON AUTO 0 1 2} SYSTem:CONFigure:BLEeder[:STATe]?	
Parameter	0	<NR1> Turns the bleeder resistor off.
	OFF	Turns the bleeder resistor off.
	1	<NR1> Turns the bleeder resistor on.
	ON	Turns the bleeder resistor on.
	2	<NR1> Turns the AUTO mode on.
	AUTO	Turns the AUTO mode on.
Return parameter	<NR1>	Returns bleeder resistor status.

## SYSTem:CONFigure:CURRent:CONTRol



Description	Sets or queries the CC control mode (local control (panel), external voltage control, external resistance control). This setting is applied only after the unit is reset.	
Syntax	SYSTem:CONFigure:CURRent:CONTRol { 0   1   2   3 }	
Query Syntax	SYSTem:CONFigure:CURRent:CONTRol?	
Parameter/Return	<NR1>	Description

0	Local (Panel) control
1	External voltage control
2	External resistance control; $10\text{k}\Omega = I_o \text{ max}$ , $0\text{k}\Omega = I_o \text{ min}$ .
3	External resistance control; $10\text{k}\Omega = I_o \text{ min}$ , $0\text{k}\Omega = I_o \text{ max}$ .

## SYSTem:CONFigure:VOLTage:CONTRol

Set →

→ Query

**Description** Sets or queries the CV control mode (local control, external voltage control, external resistance control). This setting is applied only after the unit is reset.

**Syntax** SYSTem:CONFigure:VOLTage:CONTRol { 0 | 1 | 2 | 3 }

**Query Syntax** SYSTem:CONFigure:VOLTage:CONTRol?

Parameter/Return	<NR1>	Description
	0	Local (Panel) control
	1	External voltage control
	2	External resistance control; $10\text{k}\Omega = V_o \text{ max}$ , $0\text{k}\Omega = V_o \text{ min}$ .
	3	External resistance control; $10\text{k}\Omega = V_o \text{ min}$ , $0\text{k}\Omega = V_o \text{ max}$ .

Set →

→ Query

## SYSTem:CONFigure:MSLave

**Description** Sets or queries the unit operation mode. This setting is only applied after the unit has been reset.

**Syntax** SYSTem:CONFigure:MSLave { 0 | 1 | 2 | 3 | 4 }

**Query Syntax** SYSTem:CONFigure:MSLave?



Note

Series mode is only supported for 30V, 40V, 80V and 160V models.

Parameter/Return	<NR1>	Description
	0	Master/Local
	1	Master/Parallel 1 (2 units)
	2	Master/Parallel 2 (3 units)
	3	Slave/Parallel
	4	Slave/Series

Set →

SYSTem:CONFigure:OUTPut:EXTernal[:MODE] → Query

**Description** Sets the external logic as active high or active low. This setting is only applied after the unit has been reset.

**Syntax** SYSTem:CONFigure:OUTPut:EXTernal[:MODE]

**Query Syntax** SYSTem:CONFigure:OUTPut:EXTernal[:MODE]?

<b>Parameter</b>	0	Active high
	HIGH	Active high
	1	Active low
	LOW	Active low

<b>Return Parameter</b>	0	<boolean>Active high
	1	<boolean>Active low

Set →

SYSTem:CONFigure:OUTPut:PON[:STATe] → Query

**Description** Sets the unit to turn the output ON/OFF at power-up. This setting is only applied after the unit has been reset.

**Syntax** SYSTem:CONFigure:OUTPut:PON[:STATe]  
{OFF|ON|0|1}

**Query Syntax** SYSTem:CONFigure:OUTPut:PON[:STATe]?

Parameter	0	Output off at power up
	OFF	Output off at power up
	1	Output on at power up
	ON	Output on at power up
Return Parameter	0	Output off at power up
	1	Output on at power up

Set →

→ Query

## SYSTem:COMMunicate:ENABLE

Description	Enables/Disables LAN, GPIB or USB remote interfaces as well as remote services (Sockets, Web Server).	
	This setting is applied only after the unit is reset.	
Syntax	SYSTem:COMMunicate:ENABLE <mode>,<interface>	
Query Syntax	SYSTem:COMMunicate:ENABLE? <interface>	
Parameter	<mode>	
	OFF	Turns the selected mode off.
	0	Turns the selected mode off.
	ON	Turns the selected mode on.
	1	Turns the selected mode on.
	<interface>	
	GPIB	Select GPIB
	USB	Select USB
	LAN	Select LAN
	SOCKets	Select Sockets
	WEB	Select the web server
Return Parameter	0	The selected mode is off.
	1	The selected mode is on.

Example	SYST:COMM:ENAB 1,USB Turns the USB interface on.
---------	-----------------------------------------------------

Query Example	SYST:COMM:ENAB? USB 1 Queries the USB state, returns 1 (USB is on).
---------------	---------------------------------------------------------------------------




---

**SYSTem:COMMunicate:GPIB[:SELF]:ADDress**

Description	Sets or queries the GPIB address. This setting is applied only after the unit is reset.
-------------	-----------------------------------------------------------------------------------------

Syntax	SYSTem:COMMunicate:GPIB[:SELF]:ADDress
--------	----------------------------------------

Query Syntax	<NR1> SYSTem:COMMunicate:GPIB[:SELF]:ADDress?
--------------	--------------------------------------------------

Parameter/Return	<NR1>    0~30
------------------	---------------

Example	SYST:COMM:GPIB:SELF:ADDR 15 Sets the GPIB address to 15.
---------	-------------------------------------------------------------




---

**SYSTem:COMMunicate:LAN:IPADdress**

Description	Sets or queries LAN IP address. This setting is applied only after the unit is reset.
-------------	---------------------------------------------------------------------------------------

Syntax	SYSTem:COMMunicate:LAN:IPADdress <string>
--------	-------------------------------------------

Query Syntax	SYSTem:COMMunicate:LAN:IPADdress?
--------------	-----------------------------------

Parameter/Return	<string>    LAN IP address in string format ( "address" ) Applicable ASCII characters: 20H to 7EH
------------------	---------------------------------------------------------------------------------------------------------

Example	SYST:COMM:LAN:IPAD "172.16.5.111" Sets the IP address to 172.16.5.111.
---------	---------------------------------------------------------------------------

## SYSTem:COMMunicate:LAN:GATEway

Set →

→ Query

Description	Sets or queries the Gateway address. This setting is applied only after the unit is reset.
Syntax	SYSTem:COMMunicate:LAN:GATEway <string>
Query Syntax	SYSTem:COMMunicate:LAN:GATEway?
Parameter/Return	<string> Gateway address in string format ("address") Applicable ASCII characters: 20H to 7EH
Example	SYST:COMM:LAN:GATE "172.16.0.254" Sets the LAN gateway to 172.16.0.254.

Set →

→ Query

## SYSTem:COMMunicate:LAN:SMASK

Description	Sets or queries the LAN subnet mask. This setting is applied only after the unit is reset.
Syntax	SYSTem:COMMunicate:LAN:SMASK <string>
Query Syntax	SYSTem:COMMunicate:LAN:SMASK?
Parameter/Return	<string> Subnet mask in string format ("mask") Applicable ASCII characters: 20H to 7EH
Example	SYST:COMM:LAN:SMASK "255.255.0.0" Sets the LAN mask to 255.255.0.0.

## SYSTem:COMMunicate:LAN:MAC

→ Query

Description	Returns the unit MAC address as a string. The MAC address cannot be changed.
Query Syntax	SYSTem:COMMunicate:LAN:MAC?
Return parameter	<string> Returns the MAC address in the following format "FF-FF-FF-FF-FF-FF"

Example            SYST:COMM:LAN:MAC?  
02-80-AD-20-31-B1  
Returns the MAC address.

## SYSTem:COMMunicate:LAN:DHCP

Set →  
→ Query

Description	Turns DHCP on/off. Queries the DHCP status. This setting is applied only after the unit is reset.	
Syntax	SYSTem:COMMunicate:LAN:DHCP {OFF  ON   0   1}	
Query Syntax	SYSTem:COMMunicate:LAN:DHCP?	
Parameter	0	DHCP off
	OFF	DHCP off
	1	DHCP on
	ON	DHCP on
Return parameter	0	<boolean>DHCP off
	1	<boolean>DHCP on

## SYSTem:COMMunicate:LAN:DNS

Set →  
→ Query

Description	Sets or queries the DNS address. This setting is applied only after the unit is reset.	
Syntax	SYSTem:COMMunicate:LAN:DNS <string>	
Query Syntax	SYSTem:COMMunicate:LAN:DNS?	
Parameter/Return	<string>	DNS in string format ( "mask" ) Applicable ASCII characters: 20H to 7EH
Example	SYST:COMM:LAN:DNS "172.16.1.252" Sets the DNS to 172.16.1.252.	

## SYSTem:COMMunicate:LAN:HOSTname


→ Query

Description	Queries the host name.
-------------	------------------------




Query Syntax	SYSTem:COMMunicate:LAN:HOSTname?
Return Parameter	<string> Host name in string format
Query Example	SYST:COMM:LAN:HOST? P-160054 Returns the host name (P-160054).

## SYSTem:COMMunicate:LAN:WEB:PACTive




Description	Sets or queries whether the web password is on or off. This setting is applied only after the unit is reset.	
Syntax	SYSTem:COMMunicate:LAN:WEB:PACTive {OFF   ON   0   1}	
Query Syntax	SYSTem:COMMunicate:LAN:WEB:PACTive?	
Parameter	0	Web password off
	OFF	Web password off
	1	Web password on
	ON	Web password on
Return parameter	0	<boolean> Web password off
	1	<boolean> Web password on

## SYSTem:COMMunicate:LAN:WEB:PASSword




Description	Sets or queries the web password. This setting is applied only after the unit is reset.	
Syntax	SYSTem:COMMunicate:LAN:WEB:PASSword <NR1>	
Query Syntax	SYSTem:COMMunicate:LAN:WEB:PASSword?	
Parameter/Return	<NR1>	0 ~ 9999
Example	SYST:COMM:LAN:WEB:PASS 1234 Set the web password as 1234.	



## SYSTem:COMMunicate:RLState

Description	Sets or queries the control state of the instrument.	
Note	Only applicable for software version 1.60 or above.	
Syntax	SYSTem:COMMunicate:RLState {LOCal   REMote   RWLock}	
Query Syntax	SYSTem:COMMunicate:RLState ?	
Parameter	LOCal	Sets the instrument to front panel control.
	REMote	Sets the instrument to remote interface control.
	RWLock	Disables the front panel keys and only allows the instrument to be controlled via the remote interface.
Return parameter	LOC	The instrument is set to front panel control.
	REM	The instrument is set to remote interface control.
	RWL	The front panel keys are disabled. The instrument can only be controlled via the remote interface.
Example	SYST:COMM:RLST LOC Sets the instrument to front panel control.	

## SYSTem:COMMunicate:USB:FRONT:STATe



Description	Queries the front panel USB-A port state.	
Query Syntax	SYSTem:COMMunicate:USB:FRONT:STATe?	
Return parameter	0	<NR1>Absent
	1	<NR1>Mass Storage

## SYSTem:COMMunicate:USB:REAR:STATe

→ Query

Description	Queries the rear panel USB-B port state.
-------------	------------------------------------------

Query Syntax	SYSTem:COMMunicate:USB:REAR:STATe?
--------------	------------------------------------

Return parameter	0	<NR1>Absent
	1	<NR1>USB-CDC
	2	<NR1>GPIB-USB (GUG-001)

Set →

## SYSTem:COMMunicate:USB:REAR:MODE

→ Query

Description	Sets or queries the rear panel USB-B port mode. This command is the equivalent to the F-22 configuration setting.
-------------	-------------------------------------------------------------------------------------------------------------------

Syntax	SYSTem:COMMunicate:USB:REAR:MODE {0 1 2 3}
--------	--------------------------------------------

Query Syntax	SYSTem:COMMunicate:USB:REAR:MODE?
--------------	-----------------------------------

Parameter/ Return parameter	0	Disable
	1	USB Host
	2	Auto detect speed
	3	Full speed only

Example	SYST:COMM:USB:REAR:MODE 1
---------	---------------------------

Sets the rear panel USB-B port mode to USB Host.

## SYSTem:ERRor

→ Query

Description	Queries the error queue. The last error message is returned. A maximum of 32 errors are stored in the error queue.
-------------	--------------------------------------------------------------------------------------------------------------------

Query Syntax	SYSTem:ERRor?
--------------	---------------

Paramter/Return	<NR1>,<string>	Returns an error code followed by an error message as a string. The string is returned as "string".
-----------------	----------------	-----------------------------------------------------------------------------------------------------

Example                SYSTem:ERRor?  
                         -100, "Command error"

Set →

→ Query

**SYSTem:KEYLock:MODE**

Description	Sets or queries the key lock mode. This setting is the equivalent of the F-19 function setting.	
Syntax	SYSTem:KEYLock:MODE {0 1}	
Query Syntax	SYSTem:KEYLock:MODE?	
Parameter / Return parameter	0	Panel lock: allow output off.
	1	Panel lock: allow output on/off.

Set →

→ Query

**SYSTem:KLOCK**

Description	Enables or disables the front panel key lock.	
Syntax	SYSTem:KLOCK { OFF   ON   0   1 }	
Query Syntax	SYSTem:KLOCK?	
Parameter	0	Panel keys unlocked
	OFF	Panel keys unlocked
	1	Panel keys locked
	ON	Panel keys locked
Return parameter	0	<boolean>Panel keys unlocked
	1	<Boolean>Panel keys locked

**SYSTem:INFormation**

→ Query

Description	Queries the system information. Returns the machine version, build date, keyboard CPLD version and analog CPLD version.	
Query Syntax	SYSTem:INFormation?	
Return Parameter	<block data>	Definite length arbitrary block response data.

Query Example     SYST:INF?

#3128MFRS\sGW-INSTEK,Module\sPHU750-60,SN\sGEY210395,OS\sversion\s4.14.20250602,SW\sVersion\s01.44,FW\sID\scode\s0653FFA9,MAC\s00-22-24-03-E1-88\n

Returns the system information as a block data.

SYSTem:PRESet Set →

Description	Resets all the settings to the factory default settings. See page 81 for details.
Syntax	SYSTem:PRESet

SYSTem:VERSIon → Query

Description	Returns the version of the SCPI specifications that the unit complies with.
Query Syntax	SYSTem:VERSIon?
Return	<1999.0> Always returns the SCPI version: 1999.0.

IEEE 488.2 Common Commands

*CLS .....	54
*ESE .....	54
*ESR .....	55
*IDN .....	55
*OPC .....	55
*RST .....	56
*SRE .....	56
*STB .....	56
*TRG .....	57
*TST .....	57
*WAI .....	57

\*CLS

Set

Description	The *CLS command clears the Standard Event Status, Operation Status and Questionable Status registers. The corresponding Enable registers in each of the above registers are not cleared.  If a <NL> newline code immediately precedes a *CLS command, the Error Que and the MAV bit in the Status Byte Register is also cleared.
-------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Syntax	*CLS
--------	------

\*ESE

Set

Query

Description	Sets or queries the Standard Event Status Enable register.
Syntax	*ESE <NR1>
Query Syntax	*ESE?
Parameter	<NR1> 0~255
Return parameter	<NR1> Returns the bit sum of the Standard Event Status Enable register.

**\*ESR** → **Query**

Description	Queries the Standard Event Status (Event) register. The Event Status register is cleared after it is read.	
Query Syntax	*ESR?	
Return parameter	<NR1>	Returns the bit sum of the Standard Event Status (Event) register and clears the register.

**\*IDN** → **Query**


Description	Queries the manufacturer, model name, serial number, and firmware version of the PHU.	
Query Syntax	*IDN?	
Return parameter	<string>	Returns the instrument identification as a string in the following format: GW-INSTEK,PHU500-90, GW0473500400,01.26.20241001.001\n Manufacturer: GW-INSTEK Model number : PHU 500-90 Serial number : GW0473500400 Firmware version : 01.26.20241001.001

**\*OPC** **Set** →  
→ **Query**

Description	The *OPC command sets the OPC bit (bit0) of the Standard Event Status Register when all current commands have been processed.  The *OPC? Query returns 1 when all the outstanding commands have completed.	
-------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--


Syntax	*OPC
Query Syntax	*OPC?
Return parameter	1 Returns 1 when all the outstanding commands have completed.

## \*RST




Description	Performs a device reset. Configures the unit to a known configuration (default settings). This known configuration is independent of the usage history.
-------------	---------------------------------------------------------------------------------------------------------------------------------------------------------

Syntax	*RST
--------	------



## \*SRE



Description	Sets or queries the Service Request Enable register. The Service Request Enable register determines which registers of the Status Byte register are able to generate service requests.
-------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Syntax	*SRE <NR1>
--------	------------

Query Syntax	*SRE?
--------------	-------

Parameter	<NR1> 0~255
-----------	-------------

Return parameter	<NR1> Returns the bit sum of the Service Request Enable register.
------------------	-------------------------------------------------------------------

## \*STB



Description	Queries the bit sum of the Status Byte register with MSS (Master summary Status).
-------------	-----------------------------------------------------------------------------------

Query Syntax	*STB?
--------------	-------

Return parameter	<NR1> Returns the bit sum of the Status Byte register with the MSS bit (bit 6).
------------------	---------------------------------------------------------------------------------



**\*TRG****Set** →

Description	The *TRG command is able to generate a “get” (Group Execute Trigger). If the PHU cannot accept a trigger at the time of the command, an error message is generated (-211, “Trigger ignored”).
-------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Syntax	*TRG
--------	------

**\*TST**→ **Query**

Description	Executes a self test.
-------------	-----------------------

Query Syntax	*TST?
--------------	-------

Return parameter	0	Returns “0” if there are no errors.
	<NR1>	Returns an error code <NR1> if there is an error.

**\*WAI****Set** →

Description	Prevents any other commands or queries from being executed until all outstanding commands have completed.
-------------	-----------------------------------------------------------------------------------------------------------

Syntax	*WAI
--------	------

## Status Register Overview

To program the PHU power supply effectively, the Status registers need to be understood. This chapter explains in detail how the Status registers are used and how to configure them.

### Introduction to the Status Registers

---

#### Overview

The status registers are used to determine the status of the power supply. The status registers maintain the status of the protection conditions, operation conditions and instrument errors.


The PHU Series have a number of register groups:

- Questionable Status Register Group
- Standard Event Status Register Group
- Operation Status Register Group
- Status Byte Register
- Service Request Enable Register
- Service Request Generation
- Error Queue
- Output Buffer

The next page shows the structure of the Status registers.

# The Status Registers


SCPI Status Register Diagrams

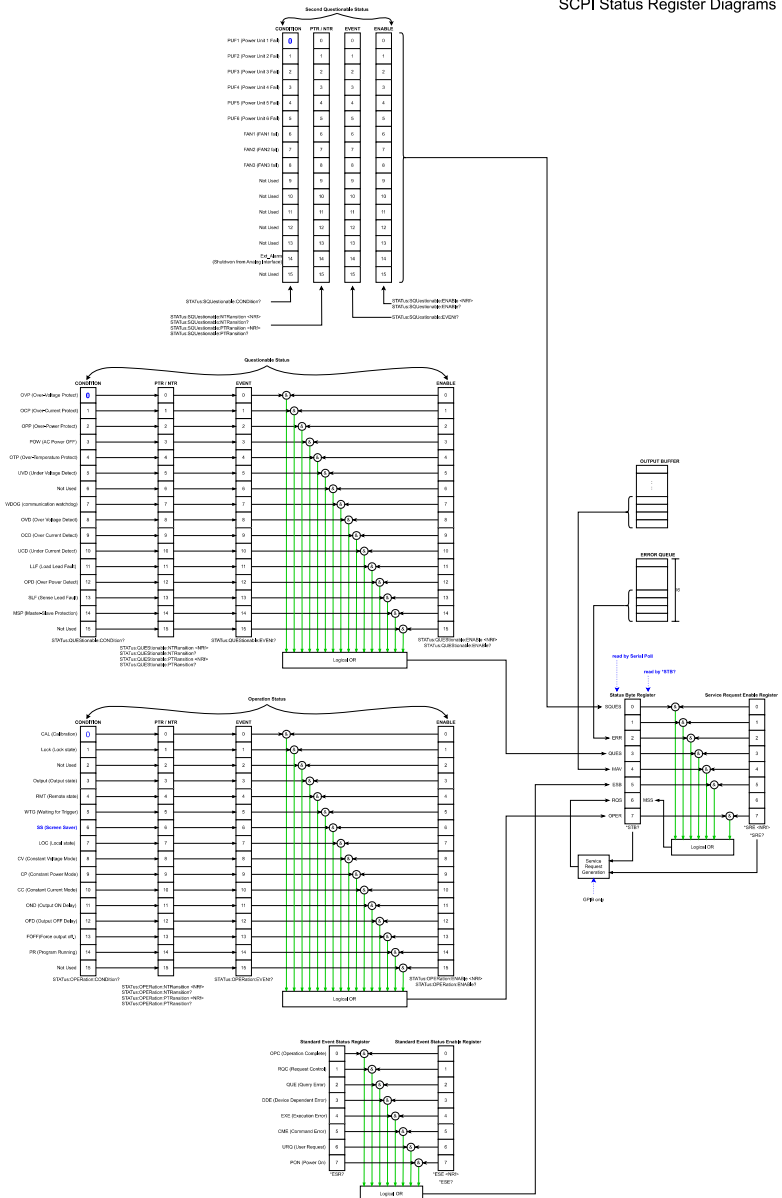

## Questionable Status Register Group

### Overview

The Questionable Status Register Group indicates if any protection modes or limits have been tripped.

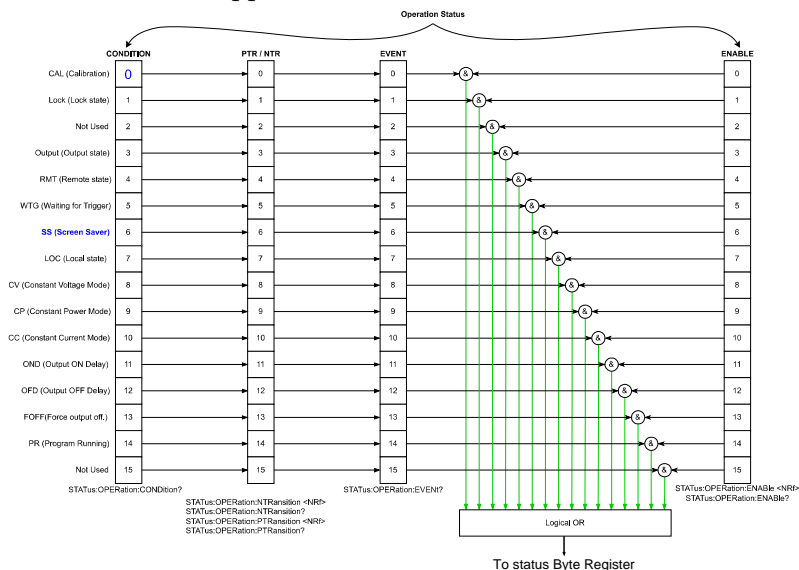

### Bit Summary


Event	Bit #	Bit Weight
OVP (Over-Voltage Protect)	0	1
Over voltage protection has been tripped		
OCP (Over-Current Protect)	1	2
Over current protection has been tripped		
OPP (Over-Power Protect)	2	4
Over power protection has been tripped		
POW (AC Power Off)	3	8
AC power switch is off		

OTP (Over Temperature Protect)	4	16
Over temperature protection has been tripped		
UVD (Under Voltage Detect)	5	32
Under Voltage Detect has been tripped		
WDOG (communication watchdog)	7	128
During remote control, if there is no communication beyond the time set by the watchdog, an alarm will be issued and the output will be turned off.		
OVD (Over Voltage Detect)	8	256
Over Voltage Detect has been tripped		
OCD (Over Current Detect)	9	512
Over Current Detect has been tripped		
UCD (Under Current Detect)	10	1024
Under Current Detect has been tripped		
LLF (Load Lead Fault)	11	2048
OPD (Over Power Detect)	12	4096
Over Power Detect has been tripped		
SLF (Sense Lead Fault)	13	8192
MSP (Master-Slave Protection)	14	16384
Master-Slave Protection has been tripped		

Condition Register	The Questionable Status Condition Register indicates the status of the power supply. If a bit is set in the Condition register, it indicates that the event is true. Reading the condition register does not change the state of the condition register.				
PTR/NTR Filters	<p>The PTR/NTR (Positive/Negative transition) register determines the type of transition conditions that will set the corresponding bit in the Event Registers. Use the Positive transition filter to view events that change from false to positive, and use the negative transition filter to view events that change from positive to negative.</p> <table> <tr> <td>Positive Transition</td><td>0→1</td></tr> <tr> <td>Negative Transition</td><td>1→0</td></tr> </table>	Positive Transition	0→1	Negative Transition	1→0
Positive Transition	0→1				
Negative Transition	1→0				
Event Register	The PTR/NTR Register will dictate the type of transition conditions will set the corresponding bits in the Event Register. If the Event Register is read, it will be cleared to 0.				
Enable Register	The Enable register determines which Events in the Event Register will be used to set the QUES bit in the Status Byte Register.				

Second Questionable Status Register Group

Overview      The Second Questionable Status Register Group indicates if any power unit or fan fail.

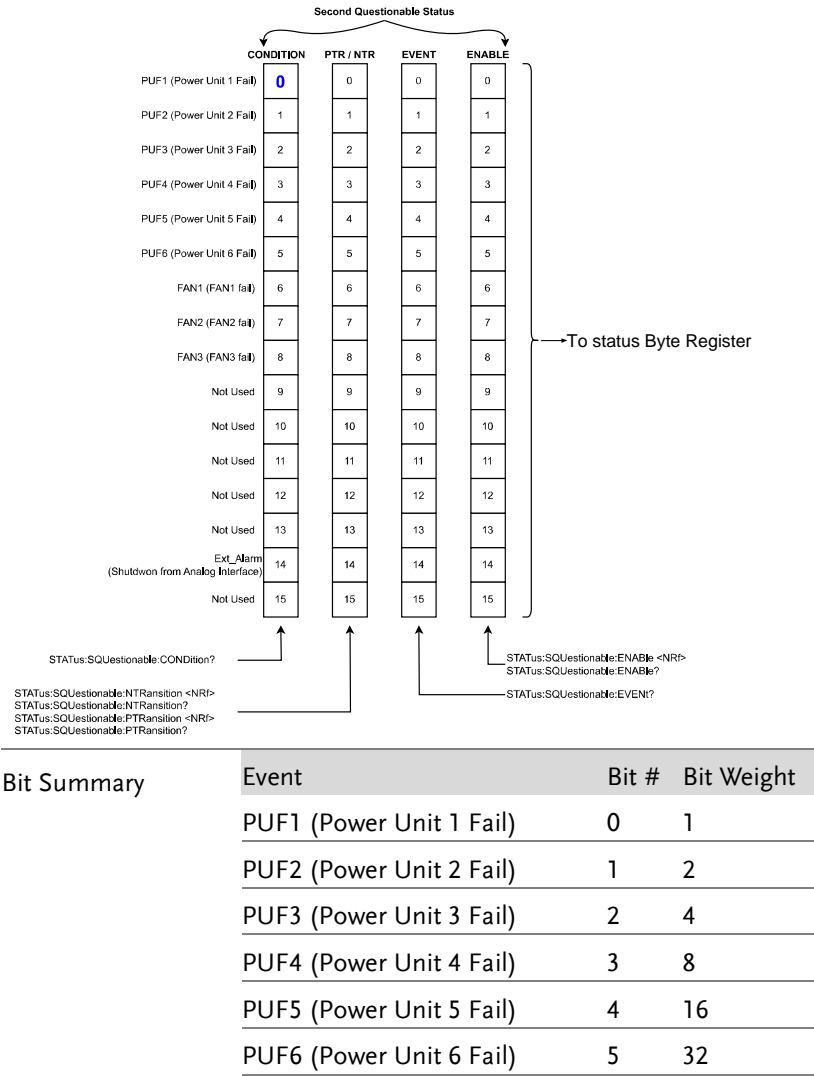


	FAN1 (FAN 1 Fail)	6	64
	FAN2 (FAN 2 Fail)	7	128
	FAN3 (FAN 3 Fail)	8	256
	Ext_Alarm (Shutdown from Analog Interface)	14	16384
Condition Register	The Questionable Status Condition Register indicates the status of the power supply. If a bit is set in the Condition register, it indicates that the event is true. Reading the condition register does not change the state of the condition register.		
PTR/NTR Filters	The PTR/NTR (Positive/Negative transition) register determines the type of transition conditions that will set the corresponding bit in the Event Registers. Use the Positive transition filter to view events that change from false to positive, and use the negative transition filter to view events that change from positive to negative.		
	Positive Transition	0→1	
	Negative Transition	1→0	
Event Register	The PTR/NTR Register will dictate the type of transition conditions will set the corresponding bits in the Event Register. If the Event Register is read, it will be cleared to 0.		
Enable Register	The Enable register determines which Events in the Event Register will be used to set the SQUES bit in the Status Byte Register.		



## Operation Status Register Group

### Overview

The Operation Status Register Group indicates the operating status of the power supply.

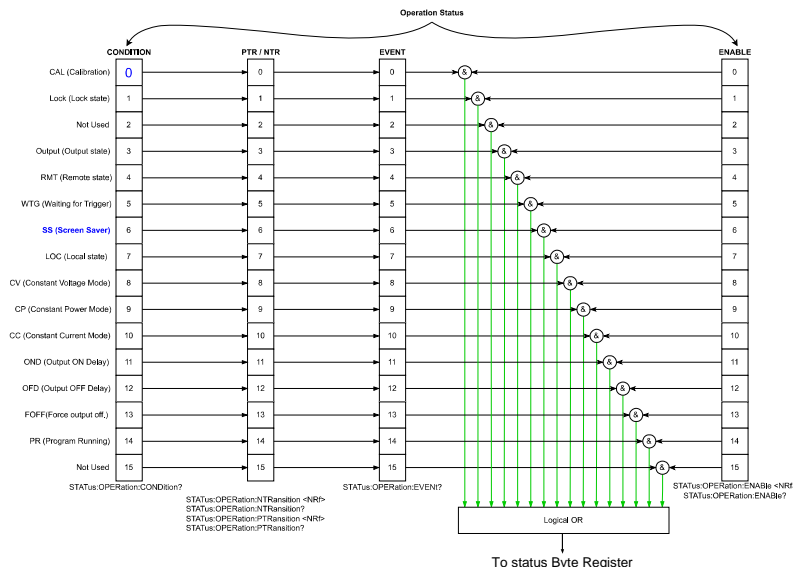

Bit Summary	Event	Bit #	Bit Weight
CAL (Calibration mode)		0	1
Indicates if the PHU is in calibration mode.			
Lock (Lock state)		1	2
Indicates if the PHU is in Lock status			
Output (Output state)		3	8
Indicates if the PHU Output is on			

RMT (Remote state) Indicates if the PHU is in Remote status.	4	18
WTG (Waiting for trigger) Indicates if the PHU is waiting for a trigger.	5	32
SS (Screen Saver)	6	64
LOC (Local state) Indicates if the PHU is in Local status.	7	128
CV (Constant voltage mode) Indicates if the PHU is in CV mode.	8	256
CP (Constant power mode) Indicates if the PHU is in CP mode.	9	512
CC (Constant current mode) Indicates if the PHU is in CC mode.	10	1024
OND (Output ON Delay) Indicates if Output ON delay time is active	11	2048
OFD (Output OFF Delay) Indicates if Output OFF delay time is active	12	4096
FOFF (Force output off)	13	8192
PR (Program Running) Indicates if a Test is running	14	16384

---


Condition Register	The Operation Status Condition Register indicates the operating status of the power supply. If a bit is set in the Condition register, it indicates that the event is true. Reading the condition register does not change the state of the condition register.	
PTR/NTR Filters	The PTR/NTR (Positive/Negative transition) register determines the type of transition conditions that will set the corresponding bit in the Event Registers. Use the Positive transition filter to view events that change from false to positive, and use the negative transition filter to view events that change from positive to negative.	
	Positive Transition	0→1
	Negative Transition	1→0
Event Register	The PTR/NTR Register will dictate the type of transition conditions will set the corresponding bits in the Event Register. If the Event Register is read, it will be cleared to 0.	
Enable Register	The Enable register determines which registered Events in the Event Register will be used to set the OPER bit in the Status Byte Register.	

---

Standard Event Status Register Group

Overview

The Standard Event Status Register Group indicates if any errors have occurred. The bits of the Event register are set by the error event queue.

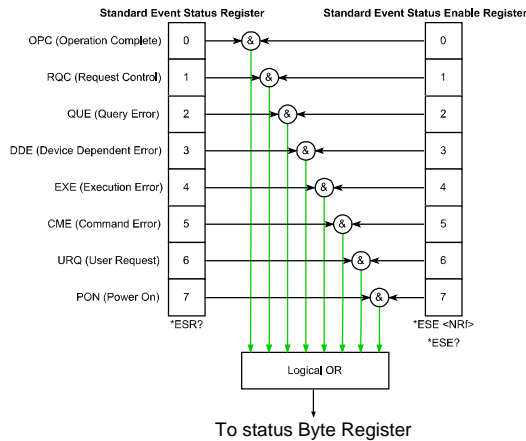


Bit Summary	Event	Bit #	Bit Weight
	OPC (Operation complete)	0	1
The OCP bit is set when all selected pending operations are complete. This bit is set in response to the *OPC command.			
	RQC (Request control)	1	2
	QUE (Query Error)	2	4
The Query Error bit is set in response to an error reading the Output Queue. This can be caused by trying to read the Output Queue when there is no data present.			
	DDE (Device Dependent Error)	3	8
Device specific error.			



Status Byte Register & Service Request Enable Register

**Overview** The Status Byte register consolidates the status events of all the status registers. The Status Byte register can be read with the \*STB? query and can be cleared with the \*CLS command.

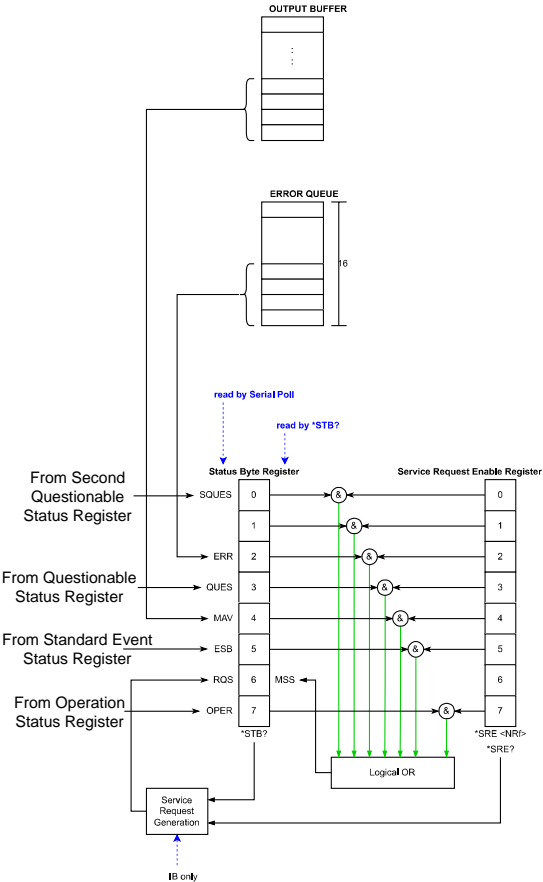

Bit Summary	Event	Bit #	Bit Weight
	SQUES (Second Questionable Status Register)	0	1
	The summary bit for the Second Questionable Status Register group.		
	ERR (Error Event/Queue)	2	4
	If data is present in the Error queue, the ERR bit will be set.		
	QUES (Questionable Status Register)	3	8
	The summary bit for the Questionable Status Register group.		
	MAV (Message Available) This is set when there is data in the Output Queue waiting to be read.	4	16
	(ESB) Event Summary Bit. The ESB is the summary bit for the Standard Event Status Register group.	5	32
	MSS Bit	6	64
	The MSS Bit is the summary of the Status Byte Register and Service Request register (bits 1-5, 7). This will be set to 1.		
	OPER (Operation Status Register)	7	128
	OPER bit is the summary bit for the Operation Status Register Group.		

---

Status Byte Register	Any bits set in the Status byte register acts as a summary register for all the three other status registers and indicates if there is a service request, an error in the Error Queue or data in the Output Queue. Reading the Status Byte register will reset the register to 0.
Service Request Enable Register	The Service Request Enable Register controls which bits in the Status Byte Register are able to generate service requests.

---



## Error List

### Command Errors

---

**Overview** An <error/event number> in the range [ -199 , -100 ] indicates that an IEEE 488.2 syntax error has been detected by the instrument's parser. The occurrence of any error in this class shall cause the command error bit (bit 5) in the event status register (IEEE 488.2, section 11.5.1) to be set. One of the following events has occurred:

- An IEEE 488.2 syntax error has been detected by the parser. That is, a controller-to-device message was received which is in violation of the IEEE 488.2 standard. Possible violations include a data element which violates the device listening formats or whose type is unacceptable to the device.
- An unrecognized header was received. Unrecognized headers include incorrect device-specific headers and incorrect or unimplemented IEEE 488.2 common commands.

Events that generate command errors shall not generate execution errors, device-specific errors, or query errors; see the other error definitions in this chapter.

---

Error Code	Description
-100 Command Error	This is the generic syntax error for devices that cannot detect more specific errors. This code indicates only that a Command Error as defined in IEEE 488.2, 11.5.1.1.4 has occurred.
-102 Syntax error	An unrecognized command or data type was encountered; for example, a string was received when the device does not accept strings.
-103 Invalid separator	The parser was expecting a separator and encountered an illegal character; for example, the semicolon was omitted after a program message unit, MEAS:VOLT:DC?:MEASCURR:DC?
-104 Data type error	The parser recognized a data element different than one allowed; for example, numeric or string data was expected but block data was encountered.
-108 Parameter not allowed	More parameters were received than expected for the header; for example, the KLOCK command only accepts one parameter, so receiving SYSTem:KLOCK 1,0 is not allowed.
-109 Missing parameter	Fewer parameters were received than required for the header; for example, the KLOCK command requires one parameter, so receiving KLOCK is not allowed.
-111 Header separator error	A character which is not a legal header separator was encountered while parsing the header; for example, no white space followed the header, thus APPL5,1 is an error.
-112 Program mnemonic too long	The header contains more than twelve characters (see IEEE 488.2, 7.6.1.4.1).
-113 Undefined header	The header is syntactically correct, but it is undefined for this specific device; for example, *XYZ is not defined for any device.

-114 Header suffix out of range	The value of a numeric suffix attached to a program mnemonic, see Syntax and Style section 6.2.5.2, makes the header invalid.
-115 Unexpected number of parameters	The number of parameters received does not correspond to the number of parameters expected. This is typically due an inconsistency with the number of instruments in the selected group.
-120 Numeric data error	This error, as well as errors -121 through -129, are generated when parsing a data element which appears to be numeric, including the non-decimal numeric types. This particular error message should be used if the device cannot detect a more specific error.
-121 Invalid character in number	An invalid character for the data type being parsed was encountered; for example, an alpha in a decimal numeric or a "9" in octal data.
-128 Numeric data not allowed	A legal numeric data element was received, but the device does not accept one in this position for the header.
-131 Invalid suffix	The suffix does not follow the syntax described in IEEE 488.2, 7.7.3.2, or the suffix is inappropriate for this device.
-141 Invalid character data	Either the character data element contains an invalid character or the particular element received is not valid for the header.
-148 Character data not allowed	A legal character data element was encountered where prohibited by the device.
-151 Invalid string data	A string data element was expected, but was invalid for some reason (see IEEE 488.2, 7.7.5.2); for example, an END message was received before the terminal quote character.
-158 String data not allowed	A string data element was encountered but was not allowed by the device at this point in parsing.

- |                                  |                                                                                                                                                                                                  |
|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| -160 Block data error            | This error, as well as errors -161 through -169, is generated when parsing a block data element. This particular error message should be used if the device cannot detect a more specific error. |
| -161 Invalid block data          | A block data element was expected, but was invalid for some reason (see IEEE 488.2, 7.7.6.2); for example, an END message was received before the length was satisfied.                          |
| -168 Block data not allowed      | A legal block data element was encountered but was not allowed by the device at this point in parsing.                                                                                           |
| -178 Expression data not allowed | A legal expression data was encountered but was not allowed by the device at this point in parsing.                                                                                              |

## Execution Errors

---

**Overview** An <error/event number> in the range [ -299 , -200 ] indicates that an error has been detected by the instrument's execution control block. The occurrence of any error in this class shall cause the execution error bit (bit 4) in the event status register (IEEE 488.2, section 11.5.1) to be set. One of the following events has occurred:

- A <PROGRAM DATA> element following a header was evaluated by the device as outside of its legal input range or is otherwise inconsistent with the device's capabilities.
- A valid program message could not be properly executed due to some device condition.

Execution errors shall be reported by the device after rounding and expression evaluation operations have taken place. Rounding a numeric data element, for example, shall not be reported as an execution error. Events that generate execution errors shall not generate Command Errors, device-specific errors, or Query Errors; see the other error definitions in this section.

Error Code	Description
-200 Execution error	This is the generic syntax error for devices that cannot detect more specific errors. This code indicates only that an Execution Error as defined in IEEE 488.2, 11.5.1.1.5 has occurred.

-201 Invalid while in local	Indicates that a command is not executable while the device is in local due to a hard local control (see IEEE 488.2, 5.6.1.5); for example, a device with a rotary switch receives a message which would change the switches state, but the device is in local so the message can't be executed.
-203 Command protected	Indicates that a legal password-protected program command or query could not be executed because the command was disabled.
-211 Trigger ignored	Indicates that a GET, *TRG, or triggering signal was received and recognized by the device but was ignored because of device timing considerations; for example, the device was not ready to respond. Note: a DT0 device always ignores GET and treats *TRG as a Command Error.
-213 Init ignored	Indicates that a request for a measurement initiation was ignored as another measurement was already in progress.
-220 Parameter error	Indicates that a program data element related error occurred. This error message should be used when the device cannot detect the more specific errors described for errors -221 through -229.
-221 Settings conflict	Indicates that a legal program data element was parsed but could not be executed due to the current device state (see IEEE 488.2, 6.4.5.3 and 11.5.1.1.5.).
-222 Data out of range	Indicates that a legal program data element was parsed but could not be executed because the interpreted value was outside the legal range as defined by the device (see IEEE 488.2, 11.5.1.1.5.).
-224 Illegal parameter value	Used where exact value, from a list of possible, was expected.

## Device Specific Errors

**Overview** An <error/event number> in the range [ -399 , -300 ] or [ 1 , 32767 ] indicates that the instrument has detected an error which is not a command error, a query error, or an execution error; some device operations did not properly complete, possibly due to an abnormal hardware or firmware condition. These codes are also used for self-test response errors. The occurrence of any error in this class should cause the device-specific error bit (bit 3) in the event status register (IEEE 488.2, section 11.5.1) to be set. The meaning of positive error codes is device-dependent and may be enumerated or bit mapped; the <error message>string for positive error codes is not defined by SCPI and available to the device designer.



### Note

The string is not optional; if the designer does not wish to implement a string for a particular error, the null string should be sent (for example, 42,""). The occurrence of any error in this class should cause the device-specific error bit (bit 3) in the event status register (IEEE 488.2, section 11.5.1) to be set. Events that generate device-specific errors shall not generate command errors, execution errors, or query errors; see the other error definitions in this section.

Error Code	Description
-310 System error	Indicates that some error, termed "system error" by the device, has occurred. This code is device-dependent.
-320 Storage fault	Indicates that the firmware detected a fault when using data storage. This error is not an indication of physical damage or failure of any mass storage element.

## Query Errors

---

### Overview

An <error/event number> in the range [ -499 , -400 ] indicates that the output queue control of the instrument has detected a problem with the message exchange protocol described in IEEE 488.2, chapter 6. The occurrence of any error in this class shall cause the query error bit (bit 2) in the event status register (IEEE 488.2, section 11.5.1) to be set. These errors correspond to message exchange protocol errors described in IEEE 488.2, section 6.5. One of the following is true:

- An attempt is being made to read data from the output queue when no output is either present or pending;
- Data in the output queue has been lost.

Events that generate query errors shall not generate command errors, execution errors, or device-specific errors; see the other error definitions in this section.

Error Code	Description
-400 Query error	This is the generic query error for devices that cannot detect more specific errors. This code indicates only that a Query Error as defined in IEEE 488.2, 11.5.1.1.7 and 6.3 has occurred.



# A PPENDIX

## PHU Default Settings

The following default settings are the factory configuration settings for the power supply (Function settings/Test settings).

Initial Settings	Default Setting
Output	Off
LOCK	0 (Disabled)
Voltage	0V
Current	0A
Power	Maximum
Internal resistance	0 $\Omega$
OVP	Maximum
OCP	Maximum
Normal Function Settings	Default Setting
Output ON delay time	0.00s
Output OFF delay time	0.00s
V-I mode slew rate select	0 = CV high speed priority
Rising voltage slew rate	
Falling voltage slew rate	
Rising current slew rate	
Falling current slew rate	
Bleeder circuit control	ON
Buzzer ON/OFF control	ON
Measurement Average Setting	Low
Lock Mode	Allow output to turn off